


Seat Installation instructions.

Port side of kayak.

Remove existing bolts and install button to the backside of the forward screw.
Install the short tube and ¼ clamp behind the stern screw (new screws supplied)

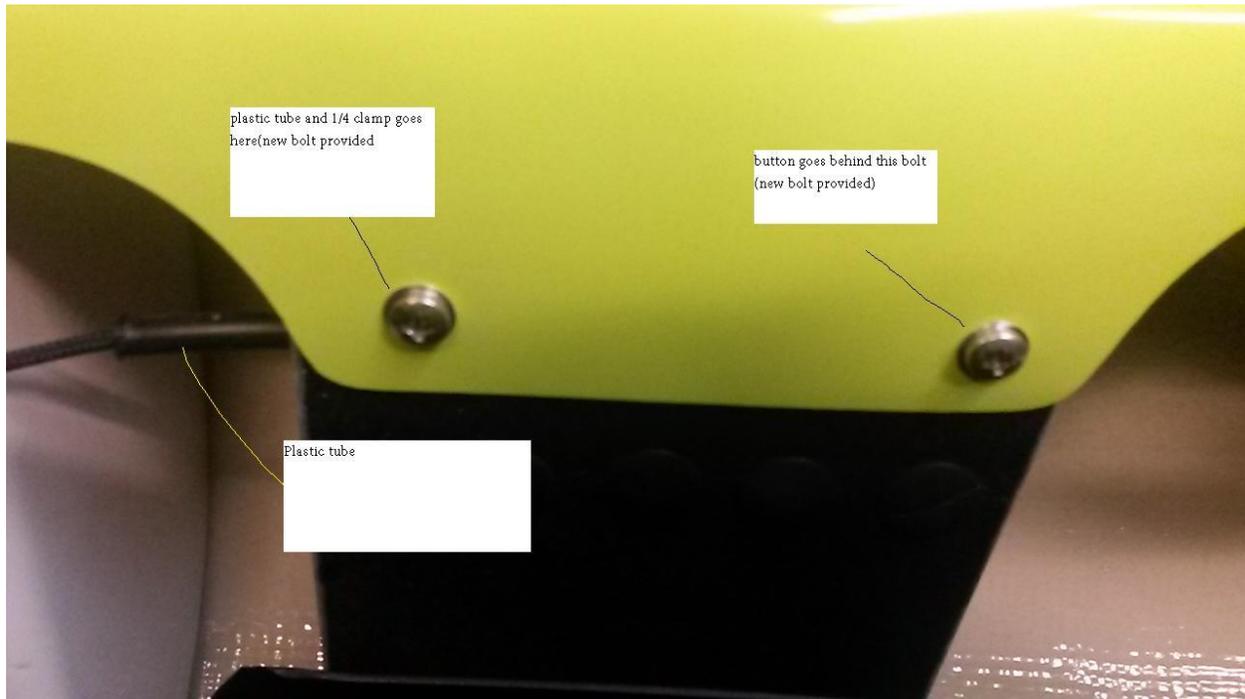

View of assembly. Back side of the flap



Jam cleat:

Can be mounted on the top of the thigh brace as shown, or behind the front edge of the side flap.




The long tube is clamped behind the side flap with the new bolts and eye straps.

The tube goes into the rear of the v-cleat and will protrude behind the side flap approx.. 1 inch.

*Note if the v-cleat is mounted in the forward hole on the side flap you will need to drill a second hole for the cleat and fasten, the tube will be inserted into the v-cleat and clamped to the second (aft) screw with the 1/4 clamp. You will need to cut the tube to within 1 inch past the side flap and heat the tube in (lighter) to slightly round the edge.

Before installing the seat bottom attach the 2 anti wear strips to the hull using 5200 or 2 part abs glue.

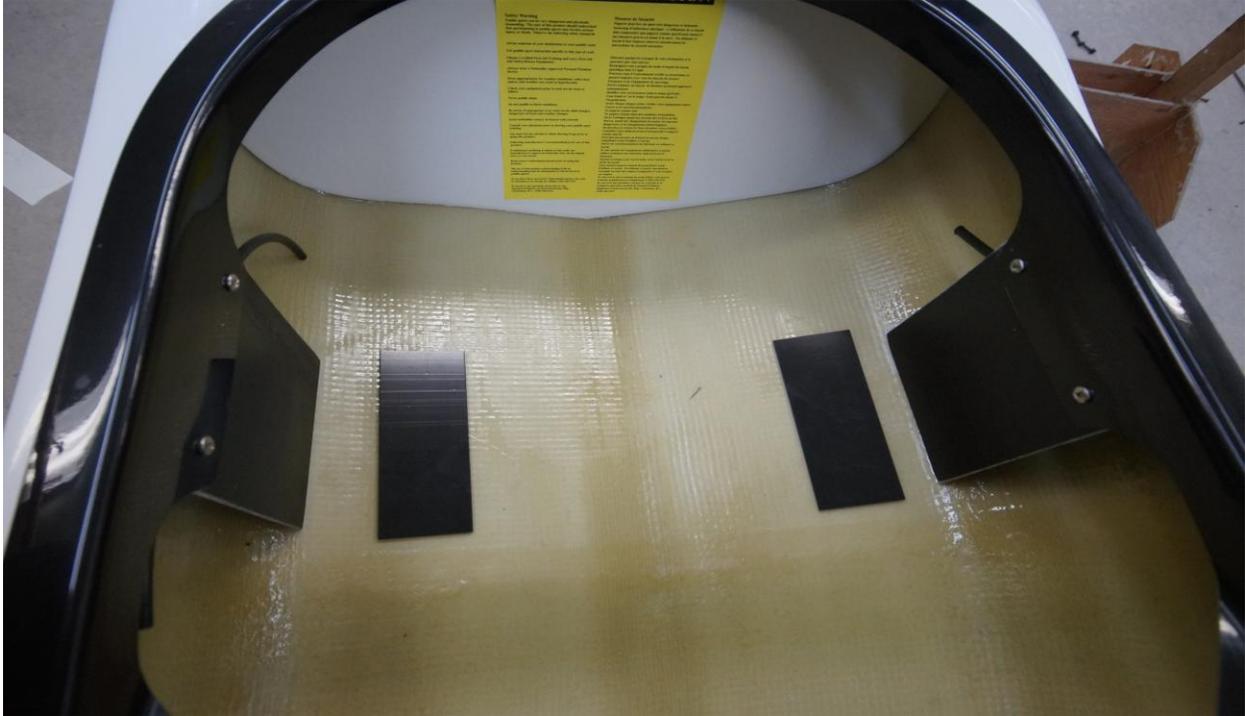

Seat bottom

The seat bottom is aligned with the front of the side flap (as shown) Drill 2 $\frac{1}{4}$ inch holes approx. $\frac{3}{4}$ inch below the top edge of the seat bottom on each side and bolt with the provided hardware.

Rope

Feed the rope through the v-cleat, through the seat back and then through the port side tubing. Tie a noose and attach to the button. Push the seat back all the way back then put the red button on the rope in front of the cleat leaving about 2 inches of slack and tie a double knot and cut.

Please contact us at 1-800-595-9755, if you require further instruction.

